



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



Skoda Superb III Kombi (2015-2023)

SUP3K BEZ KL

SOLARRIDE Zastonki do Skoda Superb 3 III Kombi (2015-2023) BEZ KLAPY 2kg

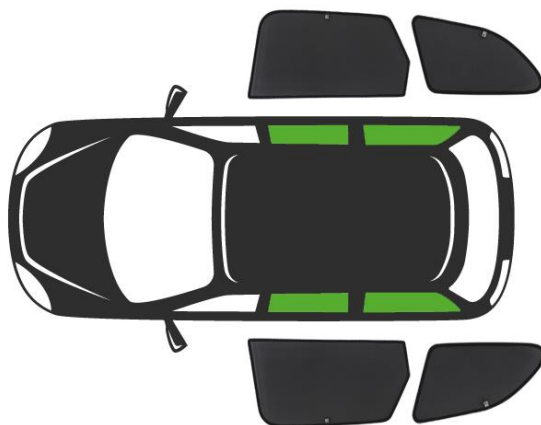

6 x



2 x



