



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Audi Q5 II (2016->>)

Q5 II DR

SOLARRIDE Zastlonki, osłony przeciwsłoneczne do Audi Q5 II od 2016 DR 1kg

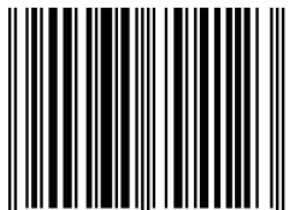

5 904035 794123 >

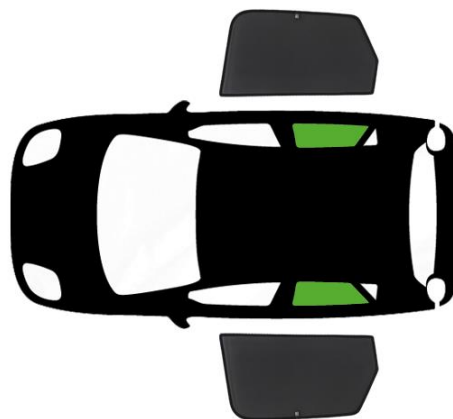

4 x



