



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**VW Volkswagen Passat B6 Variant
(2005-2010)**

B6K DR

SOLARRIDE Zakonki, pokrywy przeciwsłoneczne do VW Volkswagen Passat B6 Sedan (2005-2010) DR 1lg



5 904035 790842 >

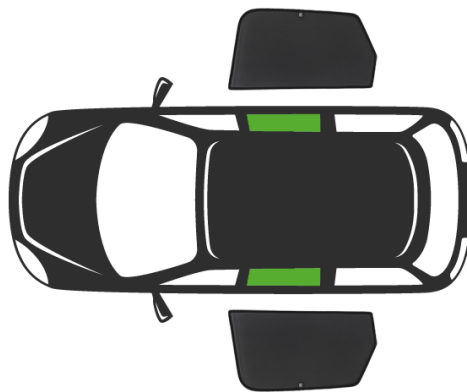

6 x



