



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




BMW X5 E53 (1999-2006)

X5 E53 DR


SOLARRIDE Zasklonki, osłony przeciwsłoneczne BMW X5 E53 (1999-2006) DR 11g

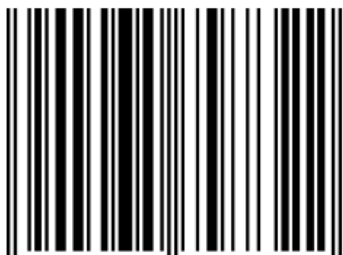

5 904035 797322 >

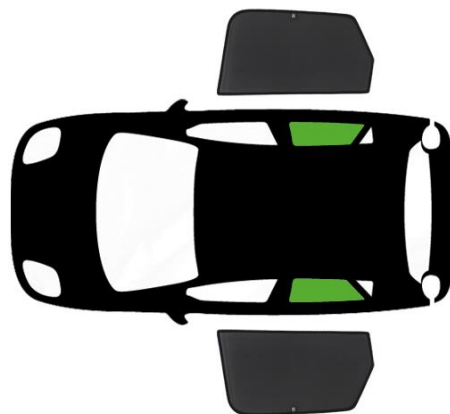

4 x

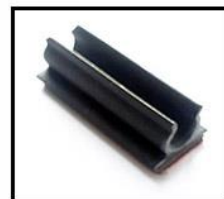

2 x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

