



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž



**Ford Mondeo Mk3 Estate Kombi  
(2000-2007)**

**MK3K DR**

SOLARRIDE Zašlonki, osłony przeciwsłoneczne Ford Mondeo III Kombi (2000-2007) DR 1kg

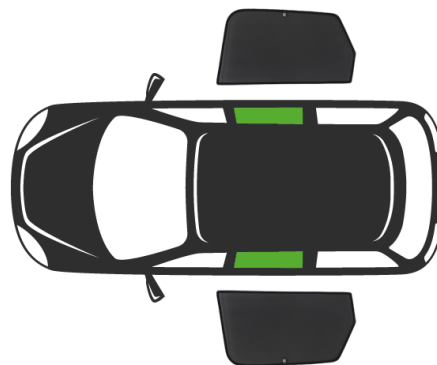

**6 x**





Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem

Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž

