



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




Ford Focus II Hatchback 3dr (2004-2011)

**FOK2HB 3DR KPL**

SOLARRIDE Zaslonki Ford Focus II Hatchback 3 Drzwi (2004-2011) KPL 3kg

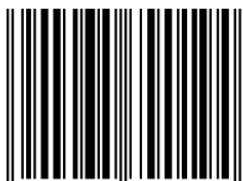

5 904035 790194 >

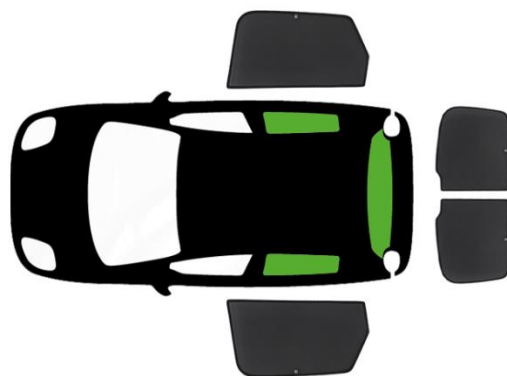

**2x**





