



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Ford Focus III Hatchback 5dr (2010-2018)

FOK3HB 5DR
KPL


SOLARRIDE Zaslonki, osłony przeciwsłoneczne do Ford Focus III Hatchback (2010-2018) KPL 3kg

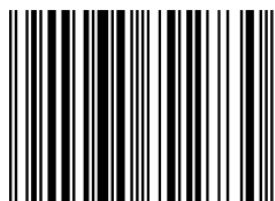

5 904035 792730 >

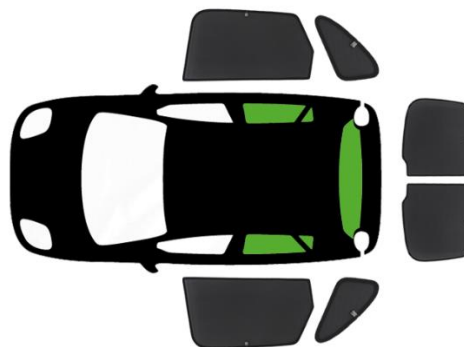

6 x

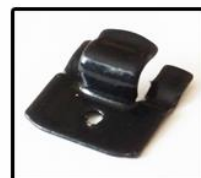

2 x



