



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž



Mazda 6 Kombi (2007-2012)

**M6K II DR**

SOLARRIDE Zaslony, oslony przeciwsłoneczne do Mazda 6 Kombi (2007-2012) DR 1kg

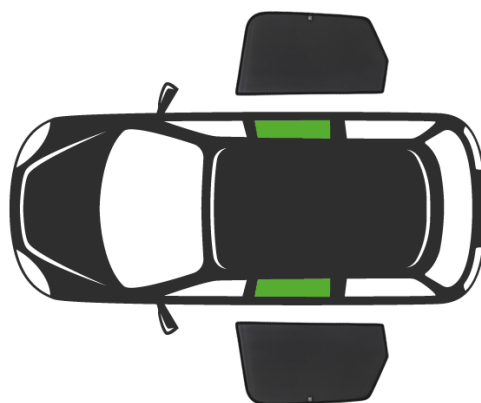

**6 x**



