



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




**Mercedes-Benz CLASS B W245
(2005-2011)**

W245 KPL

SOLARRIDE Zastlonki do Mercedes-Benz B-Klasa W245 (2005-2011) KPL 3kg

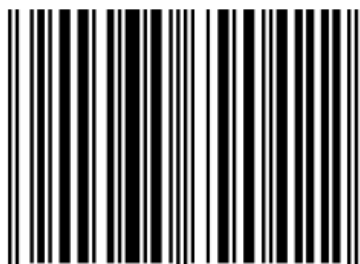

5 904035 790422 >

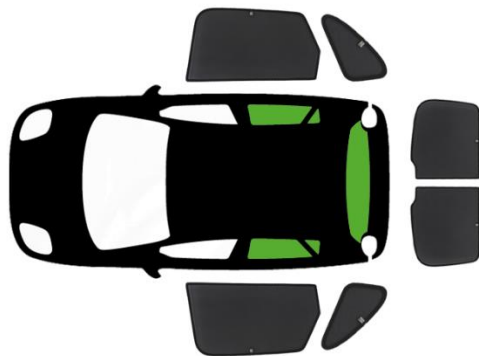


10 x



8 x



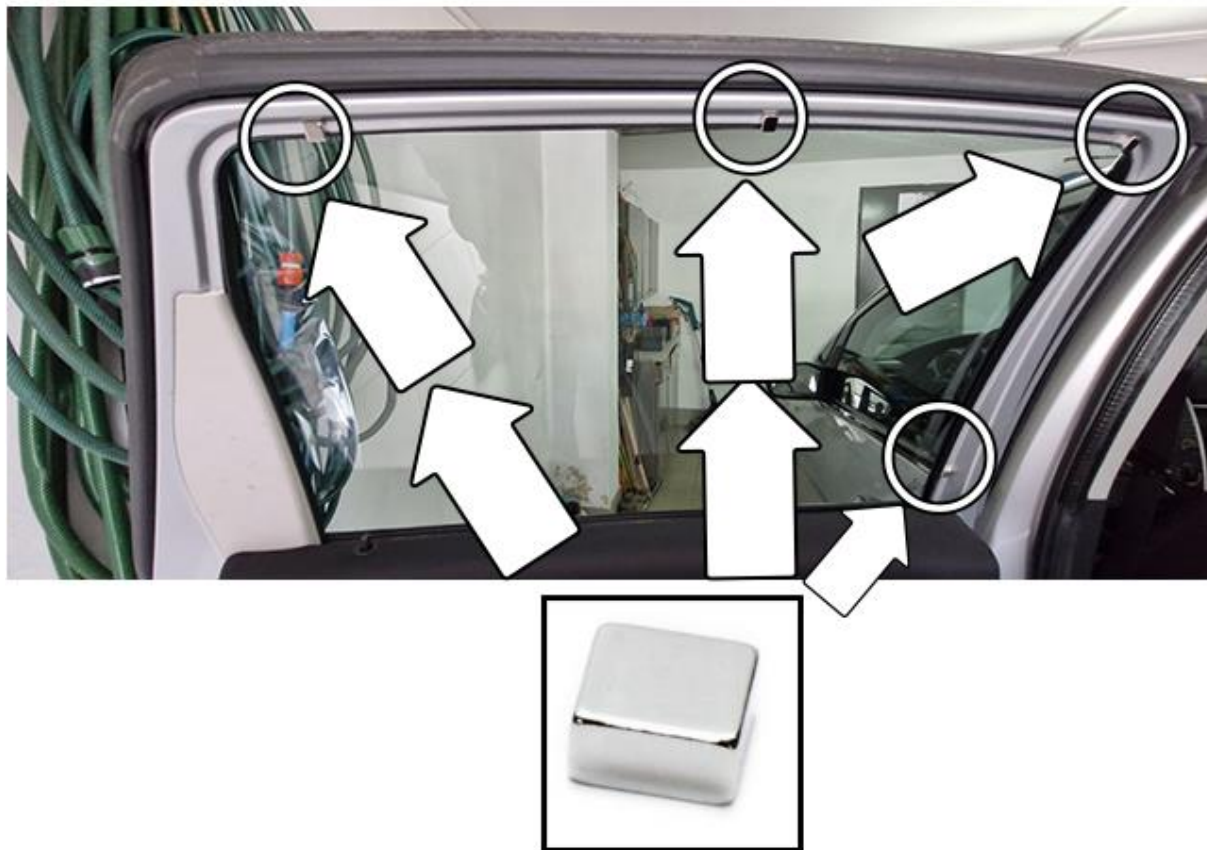



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž



