



Instrukcja montażu  
Installation Guide  
Montážní návod  
Installationsanleitung  
Instructions d'installation  
Instruções de montagem


Instrucciones de instalación  
Istruzioni per l'installazione  
Upute za sastavljanje  
Instrucțiuni de montaj  
Návod na montáž




**Mercedes-Benz B-Class W246  
(2011-2018)**

**W246 BEZ KL**

SOLARRIDE Zastonki do Mercedes-Benz W246 B-Klasa (2011-2018) BEZ KL Zlg

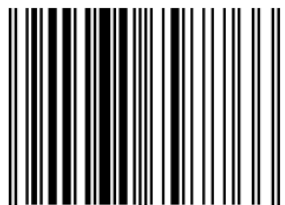

5 904035 797766 >

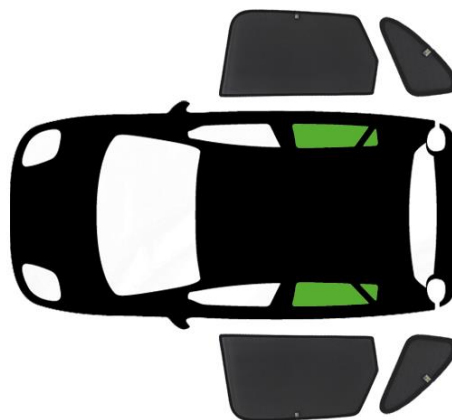

**4 x**



**2 x**



