



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Opel Astra H Estate (2004-2014)

ASTRA HK BEZ KL

SOLARRIDE Zaakniki, cokolny gromadkowane do Opel Astra H Kombi (2004-2014) BEZ KL. Zieg



5 904035 796455 >

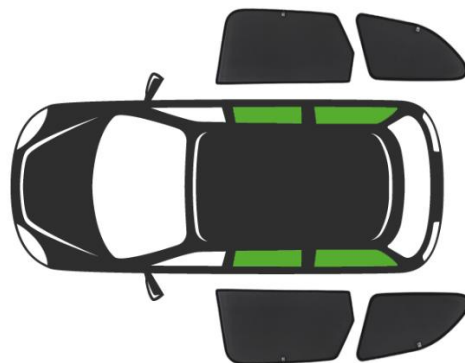

4 x



2 x



