



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem


Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Opel Astra H Estate (2004-2014)

ASTRA HK KPL

SOLARRIDE Zastorki, oskony przeciwsloneczne do Opel Astra H Kombi (2004-2014) KPL 3kg

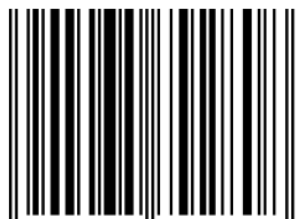

5 904035 792808 >

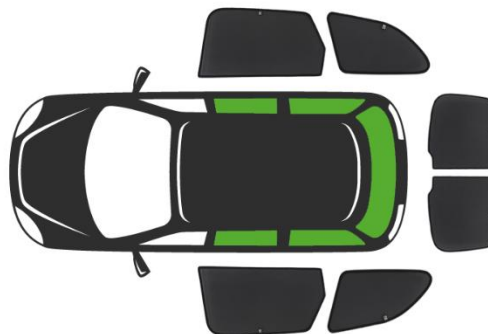

4 x



4 x





