



Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž




Renault Captur I (2013-2019)

CAPTUR 1 BEZ KL

SOLARRIDE Zaslonki, osłony przeciwsłoneczne do Renault Captur I (2013-2019) BEZ KL, 2lg



5 904035 798114 >

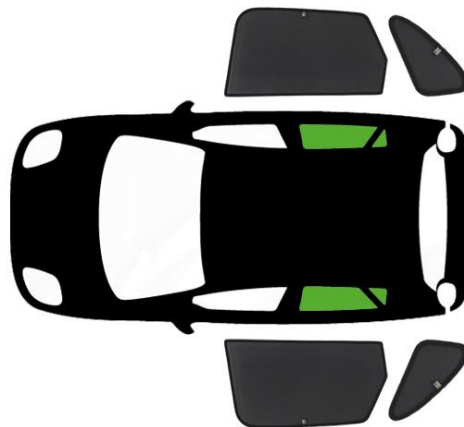

4 x



2 x





Instrukcja montażu
Installation Guide
Montážní návod
Installationsanleitung
Instructions d'installation
Instruções de montagem

Instrucciones de instalación
Istruzioni per l'installazione
Upute za sastavljanje
Instrucțiuni de montaj
Návod na montáž

